

1/4

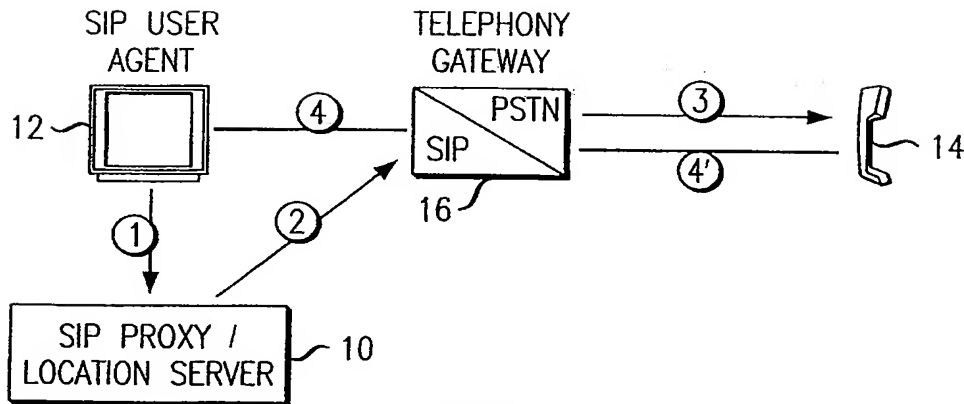


FIG. 1

CALL SETUP FOR 'SIP TO FIXED-WIRE PSTN' INTERWORKING

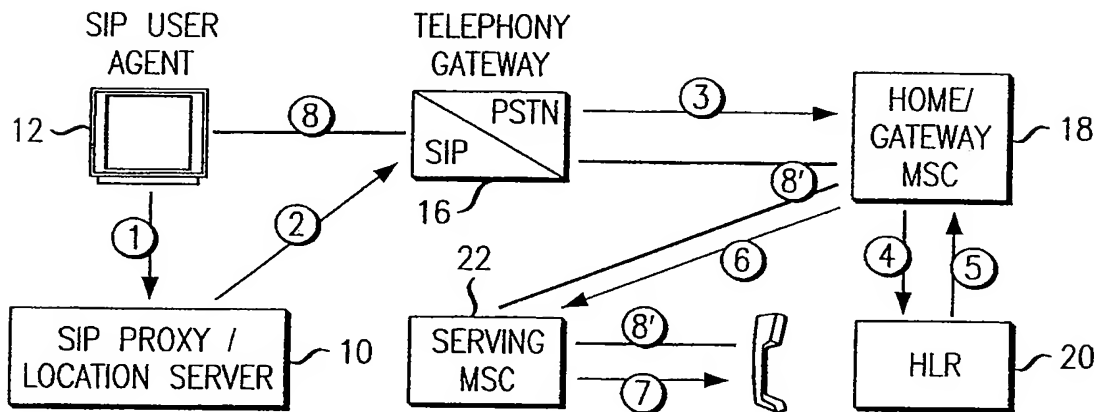


FIG. 2

CALL SETUP FOR 'SIP TO MOBILE' INTERWORKING

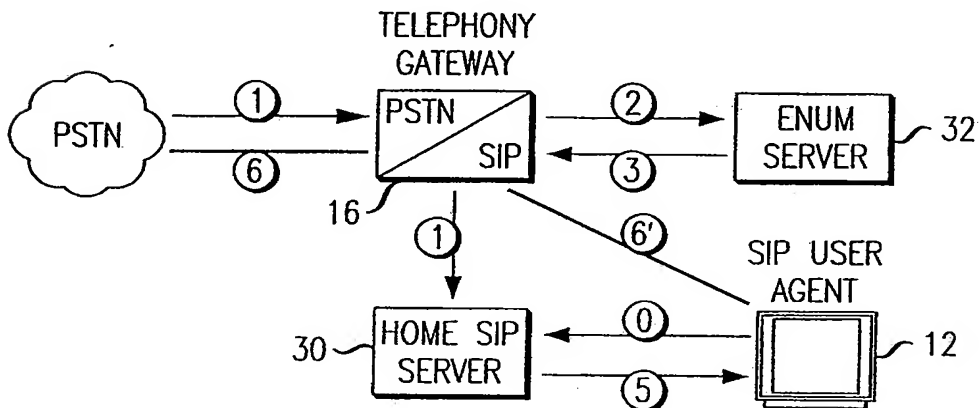


FIG. 3

CALL SETUP FOR 'PSTN TO SIP' INTERWORKING

4/4

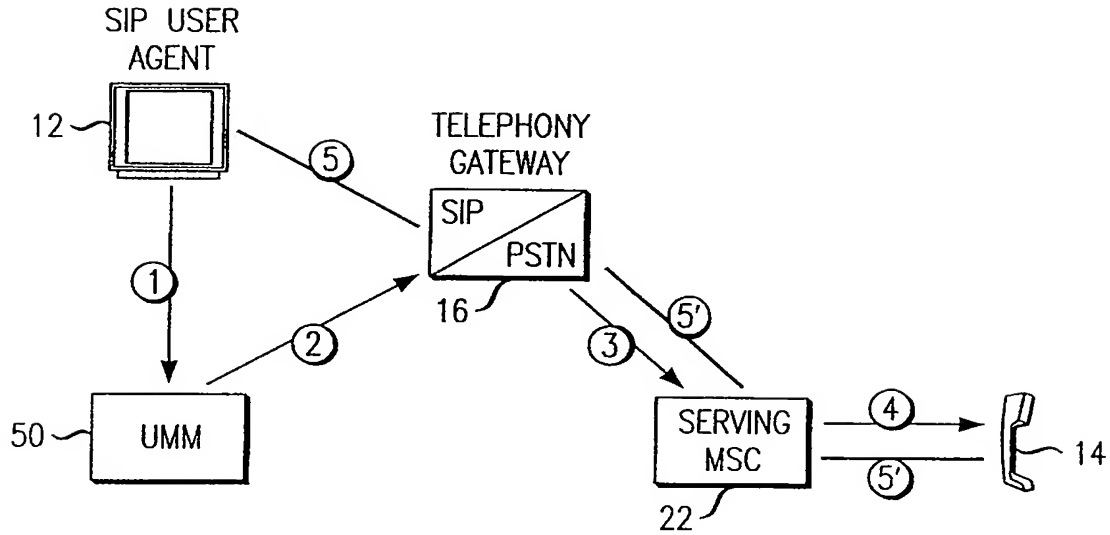


FIG. 6

CALL SETUP FOR 'SIP TO MOBILE' INTERWORKING WITH UMM

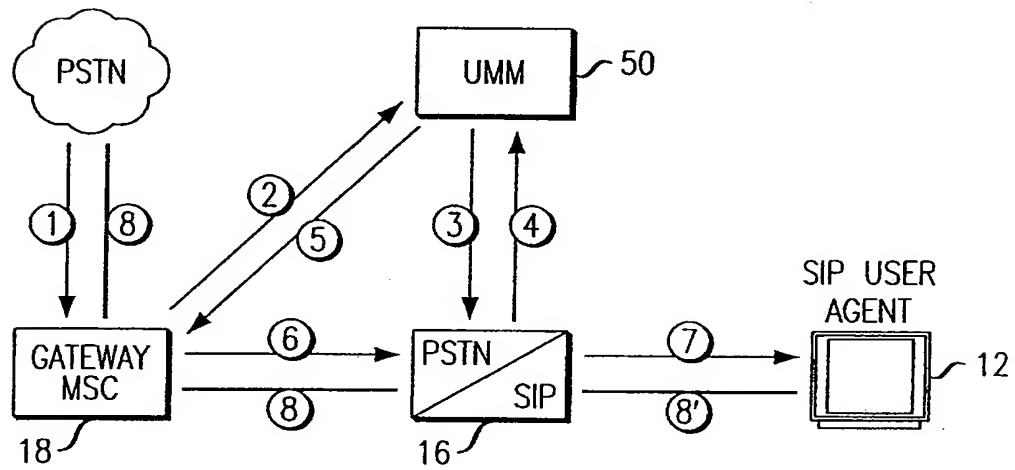


FIG. 7

CALL SETUP FOR 'PSTN TO SIP' INTERWORKING WITH UMM